



C & M
PARTY PROPS
— EST. 1958 —

CHAFERS & URN INSTRUCTIONS



CHAFERS & URNS

Chafing Dish and Urn (Using Sterno-type Heat)

1. Do not use anything but STERNO TYPE FUEL in the burner.
2. NEVER light the burner unit before putting liquid into the water pan, urn or kettle body. Low flame is sufficient to maintain proper heat.
3. Do not put unit on a hot stove or an open flame.
4. Stainless steel food pans can be used for cooking. They can also be placed in the oven to keep food hot.
5. Chafing dish water pans should be filled with hot water. Check water pan when in use to insure sufficient water is contained at all times. DO NOT USE WITHOUT WATER.

Use of Sterno

Pry the lid off of Sterno and set Sterno container into the heat cup. Light Sterno and adjust lid of heat cup at approximately $\frac{1}{2}$ open. One can of Sterno should last from 1 to 1 $\frac{1}{2}$ hours.



CHAFERS & URN INSTRUCTIONS

Chafing Dish and Urn (Using Alcohol Burner)

1. Use ONLY ALCOHOL in burner unit. NEVER use lighter fluid, gasoline, or kerosene.
2. NEVER light burner unit before putting liquid into water pan or urn. Low flame is sufficient to maintain proper heat. The wick therefore, should not extend more than $\frac{1}{4}$ inch above wick opening.
3. Do not put unit on hot stove or open flame.
4. Do not overfill. Wipe burner dry before lighting.
5. Chafing dish water pans should be filled with hot water. Check water pan when in use to insure sufficient water is contained at all times. DO NOT USE WITHOUT WATER.
6. KETTLES AND URNS must always contain at least one and one half cups of liquid while in use. BEFORE lighting, fill with hot coffee or tea. Burner unit may then be turned up and full and lit. Before drawing liquid from urn or kettle, reduce wick raiser down until only the top row of holes is visible (approximately $\frac{3}{4}$ inch of wick will be exposed). Leave flame at this level as long as liquid remains in the urn or kettle. Shut off burner when liquid is withdrawn.

We suggest you always rent an underliner tray with items using barriers to protect your linen and/or serving surface.

CLEANING INSTRUCTIONS

Before returning chafing dish, scrape and wash food pans. Wash chafing dish and urns in lukewarm water and mild detergent. NEVER USE HARSH ABRASIVES.

REMEMBER, you are renting this equipment. Be sure you are aware of the terms of your rental contract. Always return your chafing dish or urn clean to avoid additional cleaning charges.

Complete your party by renting: Tables, chairs, silver service, china, linen, etc. Also purchase: Paper and/or plastic party accessories.