



**C & M**  
**PARTY PROPS**  
— EST. 1958 —

## POPCORN POPPER INSTRUCTIONS

# POPCORN POPPER DIRECTIONS

1. Turn on ALL switches
2. Allow kettle to heat 3-4 minutes (when starting a cold machine)
3. Cut oil packet along top edge and squeeze oil into kettle. Immediately after oil melts, cut corn packet side along top and pour corn and flavoring into kettle.
4. POP ONLY ONE BAG AT A TIME !!!!
5. Close lid
6. Empty kettle immediately after popping stops.
7. Once kettle has 1st batch, continue filling oil and popcorn/flavoring as directed.
8. Machine is designed to pop only 1 portion pack at a time. DO NOT overload the kettle. Overfilling will cause kernels to burn and not pop.
9. After every few batches, please wipe out kettle with paper towels or clean dry cloth. This will prevent excessive buildup and lessen any smoke while popping.
10. When finished, turn off kettle and motor switches. Leave on warmer switch to keep popcorn in trough warm and fresh.
11. Before returning unit, please wipe out kettle and inside of unit. Do not use any commercial glass cleaner! Unit must be free of any popcorn or kernels.
12. Remember to return scooper!