

Cotton Candy Machine Instructions

 
The Cotton Candy Machine has a standard 3-prong plug and requires a standard 110 volt, 15 amp plug. Use of extension cords is not recommended. Please review the instructions before operating the machine.

Cotton Candy Machine Operation Instructions

1. **With the machine off**, fill the floss head 90% full with floss sugar. This quantity is necessary to obtain a balanced condition in the floss head. **DO NOT OVERFILL!** There will be a vibration until the head is filled and balanced evenly.
2. Turn Main Switch and Heat switch on. Rotate Heat Control knob to maximum position, to initiate the fastest possible warm up.
3. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting by adjusting the Heat Control setting until any smoke is eliminated. If necessary to eliminate the smoke, all of the heat settings can be fine-tuned

Making Floss

1. Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.
2. If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a "starter" of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. This leaves giant pockets and makes the final product appear larger.

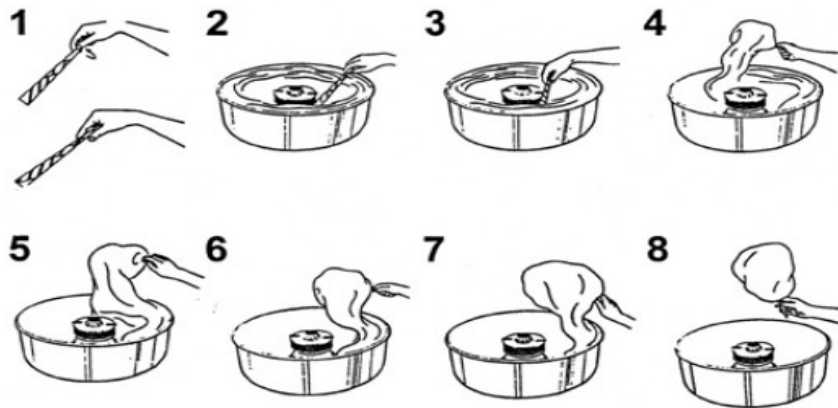

DO NOT put hands or objects in rotating spinner head.

DO NOT fill spinner head with sugar while it is running.

Operators should always wear eye protection.

Use ONLY floss cone to collect cotton candy.

Before Returning

Wipe the pan with damp cloth, **do not** empty remaining floss sugar or pour water in floss head or motor.