

Frozen Drink Machine

Always transport in upright position!!

Allow a minimum of 2 hours operating time before serving.

How to use this machine:

1. Make sure that the feet of the acrylic bowls are seated in place. (This will prevent the mix from spilling.)
2. Combine the ingredients in bowl of machine using the following amounts:

1 bottle provided mix

1.75 litre Tequila

Fill with water to fill line on front of machine.

(If using own recipe, check with staff for problem ingredients.)
3. Do not fill over the maximum fill line, mixture will expand as it freezes.
4. Place the lids on top of the bowls and plug in to 120v dedicated electrical outlet (the lights in some machines do not work.) If using extension cord, a minimum of 12 gauge, 15amp, 25' maximum length. This machine uses a lot of power, freezing will be delayed if using less power.
5. Set all controls down to freeze (all switches in down position.)

6. The green light indicating freezing should turn on within 5 minutes.

Controls:

'O' is off. 'I' is on

Main power switch operates entire machine.

Light switch operates the lights on the bowl.

Augers Switch helps to mix ingredients and push slush toward front.

Freezing Switch has two functions: UP position will keep contents cold. DOWN position will freeze contents.

Do Not:

Expose machine to direct sunlight and temps over 80 degrees.

Crowd machine – allow 10" around machine for ventilation.

Add any solid materials (ie: ice, fruits, etc.)

Overfill machine or operate empty.

Attempt to clean the machine – we will do it!



1942 Mt. Diablo Blvd. • Walnut Creek, CA 94596

Troubleshooting

Machine does not operate at all.

Check all power to machine, circuit breakers and plugs.

Liquid is leaking.

Check to see if bowls are seated correctly.

Liquid not freezing.

The green light for the compressor should come on within 5 minutes after machine turned on. If this does not happen, check to make sure the left switch is positioned on the "O" and the right switch is positioned on "R", then press the reset button "R" with a ballpoint pen.

Check clearance around machine.

Check thermometer, if temperature is over 80 degrees or machine is in direct sunlight, move to a cooler place.

Do not operate with empty bowls or below minimum line.

Do not operate over maximum fill line.

Use only the mix supplied by C&M Party Props.