

SNO-KONE MACHINE INSTRUCTIONS

Please read instructions before operating the machine.

The Sno-Kone machine consists of the motor, shaving unit and dispensing case. The motor has a power toggle switch. There is a separate switch on the light inside the case. On the end of the motor shaft is the cutter head, inside of the shaver body (gooseneck.) Going down into the shaver body is the pusher handle which presses the ice against the revolving cutter head which shaves the ice.

The machine must be plugged into a grounded wall outlet, extension cords are not recommended. The motor is 110V, single phase, 60 cycle, AC current.

TO OPERATED THE MACHINE

- Start the motor and fill the gooseneck with ice cubes or broken pieces from a block of ice 3-4 inches in size. Fill to about an inch or so from the top. The larger the piece of ice, the better the snow.
- Push the pusher handle down to press the ice against the cutter. A firm even pressure is all that is required. Sometimes it helps to relieve the pressure two or three times on the way down. This allows the ice to rearrange itself and makes a better bite.
- DO NOT FORCE THE HANDLE too much as it may stall the motor.
- When too much pressure appears to be necessary, relieve the handle and then press down again. Too much pressure on the ice will coarsen the ice, too little makes it mushy.
- It is normal for the motor to become warm when operating, a surface temperature of 150 degrees is normal.

CAUTION

Do not allow any metal or other hard substances to go down the chute or the blades will be ruined.

Never put hands, fingers or any other object in the chute when the motor is running. Disregard for these instructions will result in injury.

CLEANING

Unplug the machine before cleaning. Wipe all surfaces clean before returning to avoid additional cleaning charges.

